

## Tiltwatch and Tiltwatch Plus – How to Mount it Guide

### Tiltwatch

#### How to arm the Tiltwatch unit:

1. Peel the adhesive liner from the back of the Tiltwatch. Make sure you hold it in an upright position. Once the adhesive liner is removed, the Tiltwatch is armed. Fig 1.
2. Adhere the Tiltwatch near a corner of the container. Fig 2.
3. Place a Tiltwatch companion label over the tilt indicator so it is protruding. Fig 3.



Fig 1.

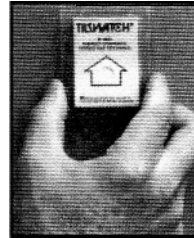


Fig 2.

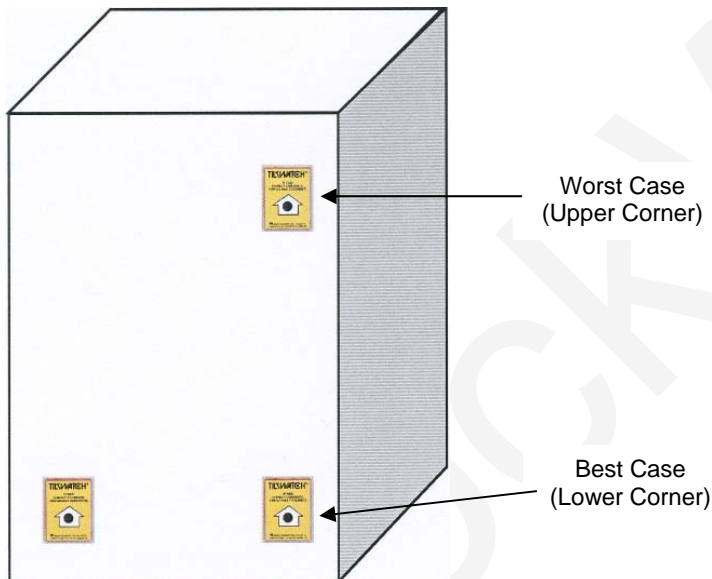


Fig 3.

#### Where to place the Tiltwatch on the package:

Placing the Tiltwatch on the lower corner of the package minimizes the chance of false activation.

Adhere it to your shipment in the following locations:



Point of impact.  
(Vertical impact will not activate  
Tiltwatch)

#### Note:

If you are using a Companion Label (shown below) on the Tiltwatch, apply the Tiltwatch first, then place the Companion Label over the Tiltwatch.



### Tiltwatch Plus

#### How to arm the Tiltwatch Plus unit:

1. Peel of the adhesive backing from the Tiltwatch Plus
2. Adhere the Tiltwatch to the container
3. Place a Tiltwatch companion label next to the Tiltwatch plus indicator

Mark the "do not tilt this carton past..." with the degrees on the label.

